

## Removing the door from the stove:

If you need to replace the glass pane or the ceramic strip, you must detach the door of the stove as follows:

1. Open the door with your right hand and hold the door handle;
2. Hold the round bar left of the glass with your left hand;
3. Move the bar upwards with short turning movements;
4. Now the door will be freed on the bottom left;
5. Pull the door towards you with your left hand until it is no longer resting on the hinge lid;
6. Now the door can be lowered and the top left area will be free.

## Replacing the door:

1. Hold the door as you did when removing it;
2. Slide the door around the top left pin;
3. Place the door above the hole bottom left;
4. Move the bar downwards with turning movements;
5. Now the bar will slide back into the hole and the door is mounted.