


Removing the door from the stove:

If you need to replace the glass pane or the ceramic strip, you must detach the door of the stove as follows:

1. Open the door with your right hand and hold the door handle;
2. Hold the round bar left of the glass with your left hand;
3. Move the bar upwards with short turning movements;
4. Now the door will be freed on the bottom left;
5. Pull the door towards you with your left hand until it is no longer resting on the hinge lid;
6. Now the door can be lowered and the top left area will be free.

Fixing the ceramic 15*5 mm strip to the door:

1. Remove the old strip
2. Completely remove the remaining glue; the bright steel bar must be visible. You can do this with an abrasive disk on a sanding machine, with sandpaper or a wire brush.
3. Remove all dust and grease
4. Apply sufficient glue in a wavy pattern (it suffices if the strips can sink into the glue and the whole surface of the strip is covered with glue)
5. Glue the strip to the edge and press the strip down. Ensure that the strip is applied at about 2 mm from the outer edge and NOT against the corner touching the seals, please see the drawing)
6. Fix the ends of the strip with glue to avoid "fraying".
7. You may respray the door with heat-resistant paint. It does not matter if the paint comes on the strip.
8. Let it dry for about 6 hours before replacing the door and using the stove.

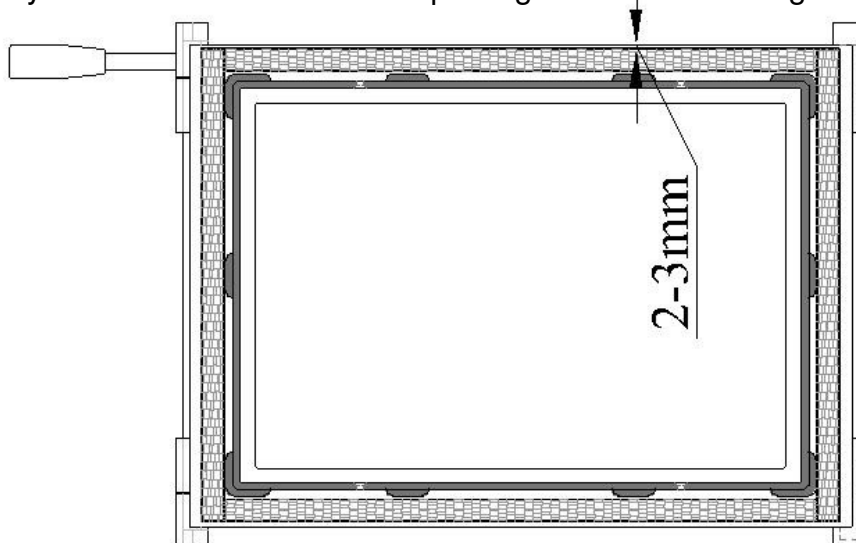

Replacing the door:

1. Hold the door as you did when removing it;
2. Slide the door around the top left pin;
3. Place the door above the hole bottom left;
4. Move the bar downwards with turning movements;
5. Now the bar will slide back into the hole and the door is mounted.